




TECNALCO

Quality Air Distribution Since 1981

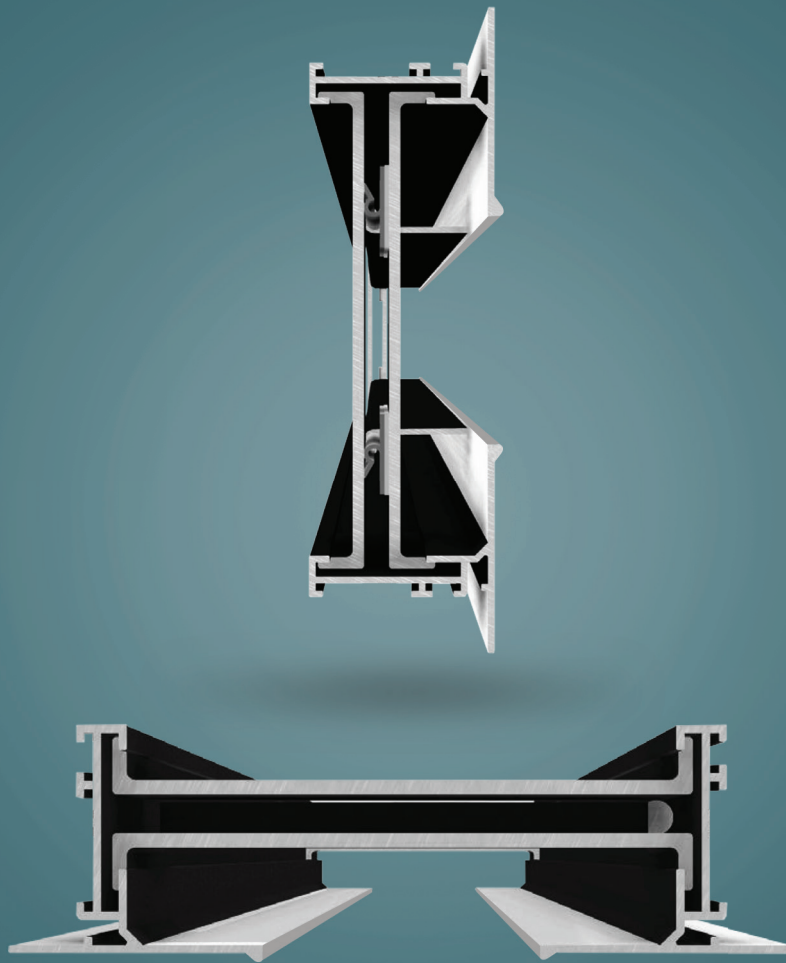


FLOWBAR

INDEX


○ INTRODUCTION	2
○ DIFFUSER SPECIFICATION	3
○ AIR PATTERNS	4
○ CORNER SECTIONS	5
○ PERFORMANCE DATA	6
○ DIMENSIONS DIFFUSER	16
○ INSTALLATION DETAILES	17

INDRODUCTION

FlowBar is an architecturally designed high capacity linear slot diffuser. It is designed to combine a high air handling capacity with maximum flexibility and is suitable for either ceiling or sidewall applications. The flexibility of the system can blend into a design or provide contrast with its striking but simple design. FlowBar is a flexible system that can provide straight lines or curves to blend with other architectural elements and enhance the overall concept of the project.

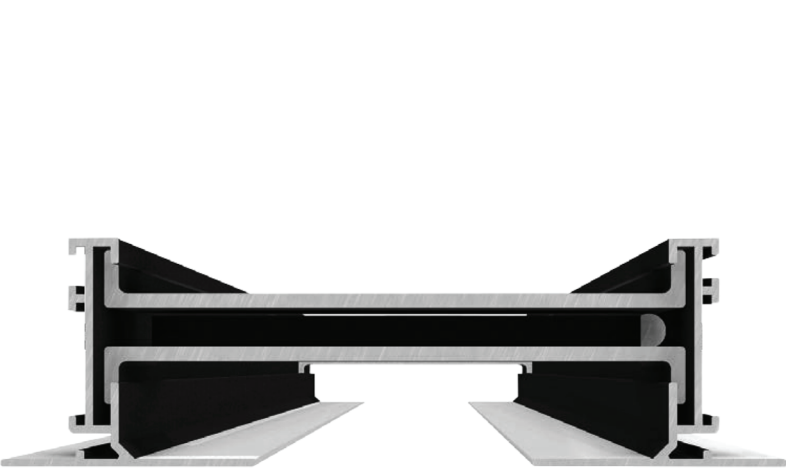

Ceiling Mounted High Throw

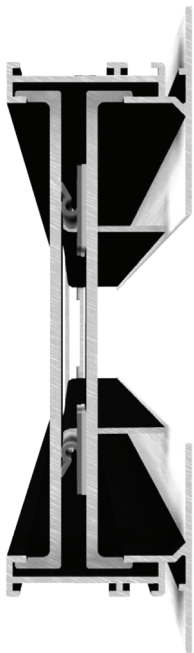

Wall Mounted Jet Throw

KEY FEATURES

- High capacity single slot diffuser available in five slot of 25mm, 38 mm, 51mm, 63 mm and 76 mm
- Choice of HT (High Throw) series horizontal or JT (Jet Throw) series vertical air patterns.
- Options include : Mitred corners, curved and angled end sections.
- Ceiling or side wall applications
- Modular or Continuous Lengths
- Curved Sections
- Corner Pieces
- Adjustable Discharge pattern
- Concealed Fixing
- Matching Plenum Boxes

SPECIFICATION DIFFUSER MODEL HIGH THROW (HT) SERIES

Models : TFB-10-HT
25mm Slot

Models :TFB-15-HT
38mm Slot

Models :TFB-20-HT
51mm Slot

Models :TFB-25-HT
63mm Slot

Models :TFB-30-HT
76mm Slot

The High Throw series is primarily designed for ceiling applications and allows the air diffuser to become inconspicuous, whilst fully integrating into the ceiling system.

The FlowBar systems satisfy both architectural and engineering requirements for designing an air distribution system that will maintain optimum room air conditions whilst being efficient yet inconspicuous.

Standard slot sizes are 25mm, 38mm, 51mm, 63mm and 76mm with single section lengths available up to 3000 mm.

SPECIFICATION DIFFUSER MODEL JET THROW (JT) SERIES

Models : TFB-10-JT
25mm Slot

Models :TFB-15-JT
38mm Slot

Models :TFB-20-JT
51mm Slot

Models :TFB-25-JT
63mm Slot


Models :TFB-30-JT
76mm Slot

The jet Throw series has pattern flow controllers to allow the airstream to be jetted in a horizontal direction (sidewall mounted) whilst fully integrating into the wall system.


The FlowBar systems satisfy both architectural and engineering requirements for designing an air distribution system that will maintain optimum room air conditions whilst being an integral component of the architectural concept of the project.

Standard slot sizes are 25mm, 38mm, 51mm, 63mm and 76mm with single section lengths available up to 3000 mm.


High Throw (HT) Ceiling Mounted

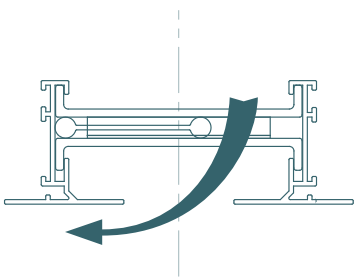

Horizontal Left

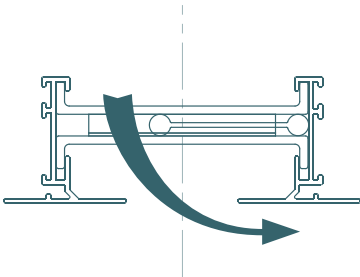


Horizontal Right

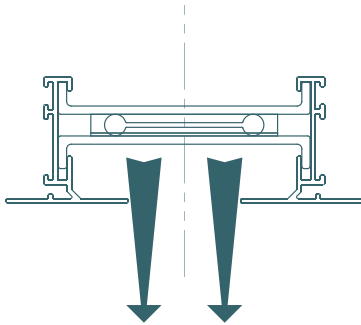


Vertical


Jet Throw (JT) Sidewall Mounted

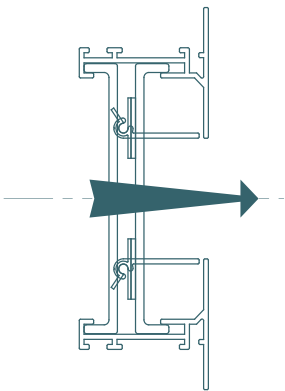

Horizontal

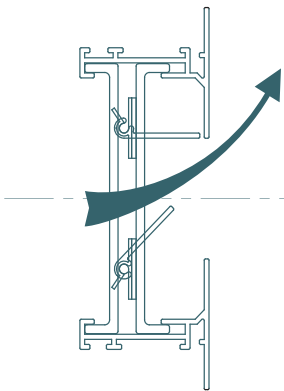


Upward

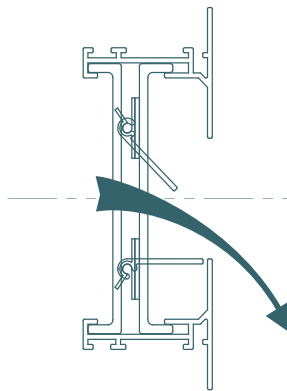


Downward

90° Mitred Corner

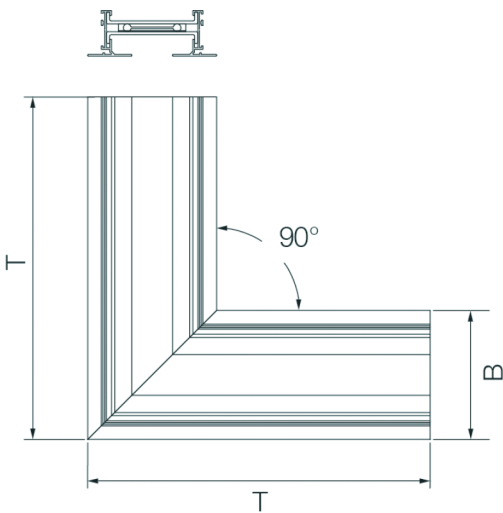


Multidirection Supply

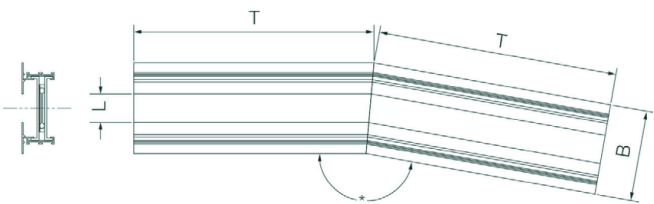

* Specify Angle

Curved Supply

NB : HT Active curved section
JT Non active dummy section only

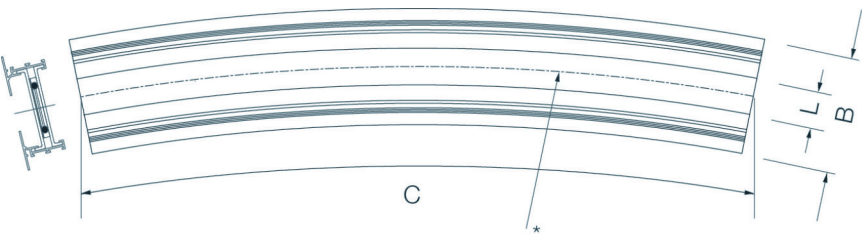

Key

B = Overall Width
T = Overall Length
C = Overall Arc Length
L = Slot Width

* Specify Radius
Minimum radius dependent on border styles. Please contact technical support

PERFORMANCE DATA - HIGH THROW (HT)

Continuous Slot Plenum High Throw (HT)
Data based on active section 1200 long

TFB - 10 - HT

25mm Slot Width	Air Flow, l/s-m	36	58	79	101	122	144	165
	Static Pressure, Pa	7	18	34	55	81	112	148
	NC (Noise Criteria)	<10	16	26	33	39	44	49
	Throw, m	1.5 - 2.5 - 4.3	2.8 - 4 - 5.5	3.8 - 4.5 - 6.5	4.3 - 5.3 - 7.3	4.5 - 5.8 - 8.3	5.3 - 6 - 8.8	5.5 - 6.8 - 9.5

TFB - 15 - HT

38mm Slot Width	Air Flow, l/s-m	43	65	86	108	129	151	173
	Static Pressure, Pa	8	18	32	51	73	99	129
	NC (Noise Criteria)	<10	14	24	31	37	42	48
	Throw, m	1.8 - 3 - 5	3 - 4.3 - 5.8	4 - 5 - 6.8	4.3 - 5.5 - 7.5	5 - 5.8 - 8.3	5.3 - 6.5 - 8.8	5.5 - 6.8 - 9.8

TFB - 20 - HT

51mm Slot Width	Air Flow, l/s-m	43	72	101	129	158	187	216
	Static Pressure, Pa	5	14	28	46	68	95	127
	NC (Noise Criteria)	<10	11	22	30	36	41	46
	Throw, m	1.5 - 2.8 - 5	2.8 - 4.3 - 6	4 - 5.3 - 7.3	5 - 5.8 - 8.3	5.3 - 6.5 - 9.3	5.8 - 7 - 10	6 - 7.5 - 10.8

TFB - 25 - HT

63mm Slot Width	Air Flow, l/s-m	43	79	115	151	187	223	259
	Static Pressure, Pa	3	10	22	38	58	82	110
	NC (Noise Criteria)	<10	11	23	31	38	43	48
	Throw, m	1.3 - 2.5 - 5	3 - 4.5 - 6.5	4.3 - 5.5 - 8	5.3 - 6.5 - 8.8	5.8 - 7 - 10	6.5 - 7.5 - 11	6.8 - 8.3 - 12.8

TFB - 30 - HT

76mm Slot Width	Air Flow, l/s-m	43	86	129	173	216	259	302
	Static Pressure, Pa	3	11	25	44	69	99	135
	NC (Noise Criteria)	<10	<10	18	27	34	40	45
	Throw, m	1 - 2.3 - 4.5	3 - 4.5 - 6.8	4.5 - 5.8 - 8.3	5.5 - 6.8 - 9.8	6 - 7.5 - 10.8	6.8 - 8.3 - 12	7.3 - 8.8 - 12.8

Table A. NC Correction for Length

Length, mm	600	1200	1800	2400	3000
Supply	-3	0	+2	+3	+5
Return	0	+3	+5	+6	+8

Table B. Correction Multiplier for Length

Length, mm	600	1200	2400	3000	3600
Throw Correction	0.72	1	1.5	1.7	1.8

- Pressures are given in Pascal (Pa)
 - Pressure loss data assumes a duct velocity is less than 4m/sec in the inlet duct
 - Isothermal throw values are given for terminal velocities of 0.8, 0.5 and 0.3m/sec respectively.
 - Throw data are based on 1200mm active section. For a 600mm section the throw values are 0.72 times those shown. For a
- 3000mm continuous length, the throw values are 1.7 times those shown and 1.8 for 3600mm units.

 - Each NC value represents the noise criteria curve which will not be exceeded by the sound pressure in any of the octave bands, 2nd through 7th, with a room absorption of 10dB, re 10⁻¹² watts, for a 1200mm section. (See Table A for other lengths.) For supply units used as a return,
 - (add 3 NC.)
- The tests were conducted with no Plenum effect for pressure or sound.
 - Throw values for High Throw units are based on a 1-way discharge from the slot.
 - Throws listed are for the 1-way air pattern. For divided airflow, select the air flow in each direction according to the number of slots aimed in that direction, with the total airflow apportioned between slots.

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - HIGH THROW (HT)

TFB -10 - HT with 150mm inlet

25mm Slot Width	Length 600mm	Air Flow, l/s	12	24	35	47	59	71	83
		Total Pressure, Pa	2	8	18	32	50	72	98
		Static Pressure, Pa	2	7	16	28	44	63	86
		NC (Noise Criteria)	<10	<10	<10	20	28	35	40
		Throw, m	0.3 - 0.5 - 1.8	1 - 1.8 - 3	1.8 - 2.8 - 3.8	2.5 - 3 - 4.3	2.8 - 3.3 - 5	3 - 3.8 - 5.5	3.3 - 4 - 5.8
	Length 1200mm	Air Flow, l/s	19	38	57	76	94	113	132
		Total Pressure, Pa	2	7	16	28	44	64	87
		Static Pressure, Pa	1	4	10	18	28	40	55
		NC (Noise Criteria)	<10	<10	<10	16	24	31	37
		Throw, m	0.3 - 0.5 - 1.8	1 - 1.8 - 4	1.8 - 3 - 5	2.8 - 4 - 5.5	3.3 - 4.3 - 6	4 - 5 - 6.8	4.3 - 5.3 - 7.3
	Length 1500mm	Air Flow, l/s	24	47	71	94	118	142	165
		Total Pressure, Pa	2	9	19	34	53	77	104
		Static Pressure, Pa	1	4	10	18	28	40	55
		NC (Noise Criteria)	<10	<10	<10	18	26	33	38
		Throw, m	0.3 - 0.5 - 2.3	1 - 2.3 - 4.3	2.3 - 3.3 - 5.5	3 - 4.3 - 6	3.8 - 5 - 7	4.3 - 5.5 - 7.5	5 - 5.8 - 8.3

TFB -15 - HT with 150mm inlet

38mm Slot Width	Length 600mm	Air Flow, l/s	19	33	47	61	76	90	104
		Total Pressure, Pa	4	13	26	45	68	96	128
		Static Pressure, Pa	4	11	22	38	57	81	109
		NC (Noise Criteria)	<10	<10	16	25	33	40	46
		Throw, m	0.5 - 1.5 - 2.8	1.5 - 2.5 - 3.8	2.5 - 3 - 4.3	2.8 - 3.8 - 5	3.3 - 4 - 5.5	3.3 - 4.3 - 6	3.8 - 4.5 - 6.5
	Length 1200mm	Air Flow, l/s	38	57	76	94	113	132	151
		Total Pressure, Pa	6	14	25	39	56	76	99
		Static Pressure, Pa	4	8	14	22	32	44	57
		NC (Noise Criteria)	<10	<10	12	20	27	33	38
		Throw, m	1 - 1.8 - 4	1.8 - 3 - 5	2.8 - 4 - 5.5	3.3 - 4.3 - 6	4 - 5 - 6.8	4.3 - 5.3 - 7.3	4.5 - 5.5 - 8
	Length 1500mm	Air Flow, l/s	42	66	90	113	137	160	184
		Total Pressure, Pa	6	15	28	44	64	88	116
		Static Pressure, Pa	3	7	13	21	30	42	55
		NC (Noise Criteria)	<10	<10	12	20	27	33	39
		Throw, m	1 - 1.8 - 4	1.8 - 3 - 5.3	2.8 - 4.3 - 6	3.3 - 5 - 6.8	4.3 - 5.3 - 7.3	4.5 - 5.8 - 8.3	5 - 6 - 8.5

TFB - 20 - HT with 200mm inlet

51mm Slot Width	Length 600mm	Air Flow, l/s	24	40	57	73	90	106	123
		Total Pressure, Pa	4	11	22	37	56	78	104
		Static Pressure, Pa	4	10	20	34	51	71	95
		NC (Noise Criteria)	<10	<10	12	21	28	35	40
		Throw, m	0.5 - 1.5 - 3	1.8 - 2.8 - 4	2.5 - 3.3 - 5	3 - 4 - 5.5	3.3 - 4.3 - 6	3.8 - 4.5 - 6.8	4 - 5 - 7
	Length 1200mm	Air Flow, l/s	42	71	99	127	156	184	212
		Total Pressure, Pa	4	11	21	35	52	73	97
		Static Pressure, Pa	3	8	16	26	38	54	71
		NC (Noise Criteria)	<10	<10	20	29	36	42	48
		Throw, m	1 - 1.8 - 4	2.3 - 3.3 - 5.5	3 - 4.5 - 6.5	4 - 5.3 - 7.3	4.5 - 5.5 - 8	5 - 6 - 8.5	5.5 - 6.8 - 9.5
	Length 1500mm	Air Flow, l/s	47	78	109	139	170	201	231
		Total Pressure, Pa	4	10	19	31	46	64	85
		Static Pressure, Pa	2	6	12	20	29	41	54
		NC (Noise Criteria)	<10	<10	19	28	36	42	47
		Throw, m	0.5 - 1.5 - 4	1.8 - 3 - 5.5	3 - 4.5 - 6.8	4 - 5.3 - 7.5	4.5 - 5.8 - 8.3	5.3 - 6.5 - 9.3	5.5 - 7 - 9.8

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - HIGH THROW (HT)

TFB -10 - HT with 200mm inlet

25mm Slot Width	Length 600mm	Air Flow, l/s	24	35	47	59	71	83	94
		Total Pressure, Pa	7	16	29	46	66	90	117
		Static Pressure, Pa	7	16	28	44	63	86	112
		NC (Noise Criteria)	<10	<10	19	27	34	40	44
		Throw, m	1 - 1.8 - 3	1.8 - 2.8 - 3.8	2.5 - 3 - 4.3	2.8 - 3.3 - 5	3 - 3.8 - 5.5	3.3 - 4 - 5.8	3.8 - 4.3 - 6
	Length 1200mm	Air Flow, l/s	33	52	71	90	109	127	146
		Total Pressure, Pa	4	10	19	30	44	60	80
		Static Pressure, Pa	3	8	16	25	37	51	67
		NC (Noise Criteria)	<10	<10	13	22	29	35	40
		Throw, m	0.5 - 1.5 - 3.3	1.8 - 2.8 - 4.5	2.5 - 3.8 - 5.5	3 - 4.3 - 6	3.8 - 4.5 - 6.8	4.3 - 5.3 - 7.3	4.5 - 5.5 - 7.5
	Length 1500mm	Air Flow, l/s	38	61	85	109	132	156	179
		Total Pressure, Pa	4	10	19	30	45	63	83
		Static Pressure, Pa	3	8	15	24	35	49	65
		NC (Noise Criteria)	<10	<10	13	22	29	35	40
		Throw, m	0.5 - 1.5 - 3.8	1.8 - 2.8 - 5	2.8 - 4 - 5.8	3.3 - 4.5 - 6.8	4.3 - 5.3 - 7.3	4.5 - 5.5 - 8	5 - 6 - 8.5

TFB -15 - HT with 200mm inlet

38mm Slot Width	Length 600mm	Air Flow, l/s	19	33	47	61	76	90	104
		Total Pressure, Pa	4	12	24	40	61	86	115
		Static Pressure, Pa	4	11	22	38	57	81	109
		NC (Noise Criteria)	<10	<10	14	24	32	38	45
		Throw, m	0.5 - 1.5 - 2.8	1.5 - 2.5 - 3.8	2.5 - 3 - 4.3	2.8 - 3.8 - 5	3.3 - 4 - 5.5	3.3 - 4.3 - 6	3.8 - 4.5 - 6.5
	Length 1200mm	Air Flow, l/s	38	61	85	109	132	156	179
		Total Pressure, Pa	4	12	22	36	54	75	99
		Static Pressure, Pa	4	9	18	30	44	61	81
		NC (Noise Criteria)	<10	<10	15	24	32	38	43
		Throw, m	1 - 1.8 - 4	2.3 - 3 - 5	3 - 4.3 - 5.8	3.8 - 4.5 - 6.8	4.3 - 5.5 - 7.3	4.5 - 5.5 - 8	5 - 6 - 8.5
	Length 1500mm	Air Flow, l/s	42	71	99	127	156	184	212
		Total Pressure, Pa	4	11	21	35	53	74	99
		Static Pressure, Pa	3	8	16	26	39	55	73
		NC (Noise Criteria)	<10	<10	14	24	31	37	43
		Throw, m	1 - 1.8 - 4	2.3 - 3.3 - 5.5	3 - 4.5 - 6.5	4 - 5.3 - 7.3	4.5 - 5.5 - 8	5 - 6 - 8.5	5.5 - 6.8 - 9.5

TFB - 20 - HT with 300mm inlet

51mm Slot Width	Length 600mm	Air Flow, l/s	24	42	61	80	99	118	137
		Total Pressure, Pa	4	12	24	41	63	90	121
		Static Pressure, Pa	4	11	24	41	62	88	119
		NC (Noise Criteria)	<10	<10	<10	13	20	27	32
		Throw, m	0.5 - 1.5 - 3	1.8 - 2.8 - 4.3	2.8 - 3.8 - 5	3.3 - 4 - 5.8	3.8 - 4.5 - 6.5	4 - 5 - 7	4.3 - 5.3 - 7.3
	Length 1200mm	Air Flow, l/s	42	78	113	149	184	219	255
		Total Pressure, Pa	3	10	22	37	57	82	110
		Static Pressure, Pa	3	10	20	35	54	76	103
		NC (Noise Criteria)	<10	<10	13	23	31	37	43
		Throw, m	1 - 1.8 - 4	2.5 - 3.8 - 5.5	3.3 - 5 - 6.8	4.5 - 5.5 - 8	5 - 6 - 8.5	5.5 - 6.8 - 9.5	5.8 - 7.3 - 10
	Length 1500mm	Air Flow, l/s	47	90	132	175	217	260	302
		Total Pressure, Pa	3	9	20	34	53	76	103
		Static Pressure, Pa	2	8	18	31	48	68	92
		NC (Noise Criteria)	<10	<10	15	25	33	39	45
		Throw, m	0.5 - 1.5 - 4	2.5 - 3.8 - 6	3.8 - 5.3 - 7.3	5 - 6 - 8.5	5.5 - 6.8 - 9.5	5.8 - 7.3 - 10.3	6.5 - 8 - 11

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - HIGH THROW (HT)

TFB - 25 - HT with 250mm inlet

63mm Slot Width	Length 600mm	Air Flow, l/s	47	68	90	111	132	153	175
		Total Pressure, Pa	9	19	33	50	71	96	124
		Static Pressure, Pa	9	18	31	47	67	90	117
		NC (Noise Criteria)	<10	<10	17	26	33	39	44
		Throw, m	1.8 - 3 - 4.3	2.8 - 3.8 - 5.3	3.3 - 4.3 - 6	4 - 5 - 6.8	4.3 - 5.3 - 7.3	4.5 - 5.5 - 8	5 - 6 - 8.5
	Length 1200mm	Air Flow, l/s	66	104	142	179	217	255	293
		Total Pressure, Pa	5	13	24	38	56	77	102
		Static Pressure, Pa	4	10	19	31	45	62	82
		NC (Noise Criteria)	<10	<10	20	29	37	44	49
		Throw, m	1.5 - 2.8 - 5.3	3 - 4.5 - 6.5	4.3 - 5.5 - 7.5	5 - 6 - 8.5	5.5 - 6.8 - 9.5	5.8 - 7.3 - 10	6.5 - 7.5 - 11
	Length 1500mm	Air Flow, l/s	71	113	156	198	241	283	326
		Total Pressure, Pa	4	11	21	33	49	68	90
		Static Pressure, Pa	3	8	15	24	35	49	65
		NC (Noise Criteria)	<10	<10	18	28	36	43	49
		Throw, m	1.3 - 2.8 - 5.5	3 - 4.5 - 6.8	4 - 5.5 - 8	5.3 - 6.5 - 8.8	5.8 - 7 - 9.8	6 - 7.5 - 10.8	6.8 - 8.3 - 11.5

TFB - 30 - HT with 250mm inlet

76mm Slot Width	Length 600mm	Air Flow, l/s	59	80	101	123	144	165	186
		Total Pressure, Pa	13	24	38	55	76	100	128
		Static Pressure, Pa	12	22	35	52	71	94	119
		NC (Noise Criteria)	<10	<10	15	23	30	36	41
		Throw, m	2.3 - 3.3 - 5	3 - 4 - 5.8	3.8 - 4.5 - 6.5	4 - 5 - 7	4.5 - 5.5 - 7.5	5 - 5.8 - 8.3	5.3 - 6 - 8.8
	Length 1200mm	Air Flow, l/s	94	130	165	201	236	271	307
		Total Pressure, Pa	10	18	30	44	61	81	103
		Static Pressure, Pa	8	14	23	35	48	63	81
		NC (Noise Criteria)	<10	<10	17	25	32	39	44
		Throw, m	2.5 - 4 - 6	3.8 - 5.3 - 7.3	4.5 - 5.8 - 8.3	5.3 - 6.5 - 9.3	5.8 - 7 - 9.8	6 - 7.3 - 10.3	6.5 - 8 - 11.3
	Length 1500mm	Air Flow, l/s	104	146	189	231	274	316	359
		Total Pressure, Pa	8	17	28	42	59	78	101
		Static Pressure, Pa	6	12	20	29	41	55	71
		NC (Noise Criteria)	<10	<10	17	25	33	40	46
		Throw, m	2.5 - 3.8 - 6.5	3.8 - 5.3 - 7.5	4.5 - 6 - 8.8	5.5 - 7 - 9.8	6 - 7.3 - 10.8	6.5 - 8 - 11.3	7 - 8.5 - 12.3

- Pressures are given in Pascal (Pa)
 - Isothermal throw values are given for terminal velocities of 0.8, 0.5 and 0.3m/sec respectively.
 - Each NC value represents the noise criteria curve which will not be exceeded by the sound pressure in any of the octave bands, 2nd through 7th, with a room absorption of 10dB, re 10⁻¹² watts.
- The tests were conducted with the FlowBar and plenums as a composite assembly.
 - Throw values for High Throw units are based on a 1-way discharge from the slot.
 - Throws listed are for the 1-way air pattern. For divided air flow, select the airflow in each direction according to the number of slots aimed in that direction, with the total airflow apportioned between slots.
- Plenums not provided by Air Diffusion may demonstrate performance variations from the published data and therefore Air Diffusion would not be able to subsequently guarantee that performance matches our data.

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - HIGH THROW (HT)

TFB - 25 - HT with 300mm inlet

63mm Slot Width	Length 600mm	Air Flow, l/s	47	68	90	111	132	153	175
		Total Pressure, Pa	9	18	32	48	69	93	120
		Static Pressure, Pa	9	18	31	47	67	90	117
		NC (Noise Criteria)	<10	<10	12	21	28	34	40
		Throw, m	1.8 - 3 - 4.3	2.8 - 3.8 - 5.3	3.3 - 4.3 - 6	4 - 5 - 6.8	4.3 - 5.3 - 7.3	4.5 - 5.5 - 8	5 - 6 - 8.5
	Length 1200mm	Air Flow, l/s	66	106	146	186	227	267	307
		Total Pressure, Pa	5	12	23	37	55	76	101
		Static Pressure, Pa	4	11	20	33	49	68	90
		NC (Noise Criteria)	<10	<10	16	26	34	41	46
		Throw, m	1.5 - 2.8 - 5.3	3 - 4.5 - 6.8	4.3 - 5.5 - 7.5	5.3 - 6 - 8.8	5.5 - 6.8 - 9.8	6 - 7.3 - 10.3	6.5 - 8 - 11.3
	Length 1500mm	Air Flow, l/s	71	118	165	212	260	307	354
		Total Pressure, Pa	4	10	20	33	49	68	91
		Static Pressure, Pa	3	9	17	28	41	58	77
		NC (Noise Criteria)	<10	<10	16	26	34	41	47
		Throw, m	1.3 - 2.8 - 5.5	3 - 4.5 - 7	4.3 - 5.8 - 8.3	5.5 - 6.8 - 9.5	5.8 - 7.3 - 10.3	6.5 - 8 - 11.3	7 - 8.5 - 12

TFB - 30 - HT with 300mm inlet

76mm Slot Width	Length 600mm	Air Flow, l/s	59	80	101	123	144	165	186
		Total Pressure, Pa	12	23	37	53	74	97	123
		Static Pressure, Pa	12	22	35	52	71	94	119
		NC (Noise Criteria)	<10	<10	11	19	26	32	37
		Throw, m	2.3 - 3.3 - 5	3 - 4 - 5.8	3.8 - 4.5 - 6.5	4 - 5 - 7	4.5 - 5.5 - 7.5	5 - 5.8 - 8.3	5.3 - 6 - 8.8
	Length 1200mm	Air Flow, l/s	94	137	179	222	264	307	349
		Total Pressure, Pa	9	18	31	48	68	92	119
		Static Pressure, Pa	8	16	28	42	60	81	105
		NC (Noise Criteria)	<10	<10	16	26	33	40	45
		Throw, m	2.5 - 4 - 6	3.8 - 5.3 - 7.3	5 - 6 - 8.5	5.5 - 6.8 - 9.5	6 - 7.3 - 10.3	6.5 - 8 - 11.3	7 - 8.5 - 12
	Length 1500mm	Air Flow, l/s	104	156	208	260	311	363	415
		Total Pressure, Pa	7	16	29	45	64	88	114
		Static Pressure, Pa	6	13	24	37	53	73	95
		NC (Noise Criteria)	<10	<10	17	26	34	41	47
		Throw, m	2.5 - 3.8 - 6.5	3.8 - 5.5 - 8	5 - 6.5 - 9.3	5.8 - 7.3 - 10.3	6.5 - 8 - 11.3	7 - 8.5 - 12.3	7.5 - 9.3 - 13

- Pressures are given in Pascal (Pa)
 - Isothermal throw values are given for terminal velocities of 0.8, 0.5 and 0.3m/sec respectively.
 - Each NC value represents the noise criteria curve which will not be exceeded by the sound pressure in any of the octave bands, 2nd through 7th, with a room absorption of 10dB, re 10⁻¹² watts.
- The tests were conducted with the FlowBar and plenums as a composite assembly.
 - Throw values for High Throw units are based on a 1-way discharge from the slot.
 - Throws listed are for the 1-way air pattern. For divided air flow, select the airflow in each direction according to the number of slots aimed in that direction, with the total airflow apportioned between slots.
- Plenums not provided by Air Diffusion may demonstrate performance variations from the published data and therefore Air Diffusion would not be able to subsequently guarantee that performance matches our data.

PERFORMANCE DATA - JET THROW (JT)

Continuous Slot Plenum Jet Throw (JT)

Data based on active section 1200 long

TFB - 10 - JT

25mm Slot Width	Air Flow, l/s-m	31	62	93	124	155	186	217
	Static Pressure, Pa	2	7	15	27	42	61	83
	NC (Noise Criteria)	<10	<10	17	24	28	32	36
	Throw, m	0.5 - 1 - 2.3	1.3 - 2.3 - 4	2.3 - 3 - 5.8	2.8 - 4 - 6.8	3.3 - 5.3 - 7.3	4 - 5.8 - 8	4.5 - 6 - 8.8

TFB - 15 - JT

38mm Slot Width	Air Flow, l/s-m	46	93	139	186	232	279	325
	Static Pressure, Pa	2	8	18	31	49	70	95
	NC (Noise Criteria)	<10	<10	13	22	28	34	40
	Throw, m	0.5 - 1.3 - 2.3	1.5 - 2.3 - 4.5	2.3 - 3.3 - 6.8	3 - 4.5 - 8	3.8 - 5.5 - 9.3	4.5 - 6.8 - 9.8	5.3 - 7.5 - 10.8

TFB - 20 - JT

51mm Slot Width	Air Flow, l/s-m	54	116	178	240	302	364	426
	Static Pressure, Pa	1	7	15	28	44	64	88
	NC (Noise Criteria)	<10	18	24	28	32	37	40
	Throw, m	0.3 - 1 - 2.3	1.5 - 2.5 - 4.5	2.5 - 3.8 - 7	3 - 5 - 9.3	4 - 6 - 10.3	5 - 7.3 - 11.3	5.5 - 8.5 - 12.3

TFB - 25 - JT

63mm Slot Width	Air Flow, l/s-m	62	147	232	317	402	488	573
	Static Pressure, Pa	1	7	17	31	51	74	102
	NC (Noise Criteria)	<10	<10	18	25	30	35	39
	Throw, m	0.3 - 1 - 2.3	1.8 - 2.5 - 5.3	2.8 - 4 - 8	3.8 - 5.5 - 10.8	4.5 - 7 - 12	5.5 - 8.5 - 13	6.8 - 10 - 14

TFB - 30 - JT

76mm Slot Width	Air Flow, l/s-m	77	178	279	379	480	580	681
	Static Pressure, Pa	1	7	17	31	50	73	100
	NC (Noise Criteria)	<10	<10	15	24	30	35	40
	Throw, m	0.3 - 1 - 2.5	1.8 - 2.8 - 5.5	2.8 - 4.3 - 8.5	4 - 5.8 - 11.5	5 - 7.3 - 12.8	6 - 8.8 - 14.3	7 - 10.3 - 15.5

Table A. NC Correction for Length

Length, mm	600	1200	1800	2400	3000
Supply	-3	0	+2	+3	+5
Return	0	+3	+5	+6	+8

Table B. Correction Multiplier for Length

Length, mm	600	1200	2400	3000	3600
Throw Correction	0.72	1	1.5	1.7	1.8

- Pressures are given in Pascal (Pa)
- Pressure loss data assumes a duct velocity is less than 4m/sec in the inlet duct
- Isothermal throw values are given for terminal velocities of 0.8, 0.5 and 0.3m/sec respectively.
- Throw data are based on 1200mm active section. For a 600mm section the throw

values are 0.72 times those shown. For a 3000mm continuous length, the throw values are 1.7 times those shown and 1.8 for 3600mm units.

- Each NC value represents the noise criteria curve which will not be exceeded by the sound pressure in any of the octave bands, 2nd through 7th, with a room absorption of 10dB, re 10⁻¹² watts, for a 1200mm section. (See Table A for other lengths.)

For supply units used as a return, add 3 NC.

- The tests were conducted with no Plenum effect for pressure or sound.
- Throws listed are for the 1-way air pattern. For divided airflow, select the air flow in each direction according to the number of slots aimed in that direction, with the total airflow apportioned between slots.

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - JET THROW (JT)

TFB -10 - JT with 200mm inlet

25mm Slot Width	Length 600mm	Air Flow, l/s	24	45	66	87	109	130	151
		Total Pressure, Pa	3	11	23	41	63	90	121
		Static Pressure, Pa	3	10	21	36	56	80	108
		NC (Noise Criteria)	<10	<10	16	23	29	34	39
		Throw, m	0.5 - 1 - 1.8	1.3 - 1.8 - 3.3	1.5 - 2.5 - 4.3	2.3 - 3.3 - 5	2.8 - 4 - 5.5	3.3 - 4.3 - 6	3.8 - 4.5 - 6.8
	Length 1200mm	Air Flow, l/s	47	83	118	153	189	224	260
		Total Pressure, Pa	4	12	25	41	63	88	119
		Static Pressure, Pa	3	8	17	28	42	60	80
		NC (Noise Criteria)	<10	<10	18	25	30	34	38
		Throw, m	1 - 1.3 - 2.5	1.5 - 2.3 - 4.3	2.3 - 3 - 5.8	2.8 - 4 - 6.8	3.3 - 5.3 - 7.3	4 - 5.8 - 8	4.5 - 6 - 8.5
	Length 1500mm	Air Flow, l/s	52	92	132	172	212	252	293
		Total Pressure, Pa	4	11	23	40	60	85	114
		Static Pressure, Pa	2	6	13	23	34	48	65
		NC (Noise Criteria)	<10	<10	17	24	29	33	37
		Throw, m	1 - 1.3 - 2.5	1.5 - 2.3 - 4.3	2.3 - 3 - 6	2.8 - 4 - 7	3.3 - 5.3 - 8	4 - 6 - 8.5	4.5 - 6.5 - 9.3

TFB -15 - JT with 200mm inlet

38mm Slot Width	Length 600mm	Air Flow, l/s	28	52	76	99	123	146	170
		Total Pressure, Pa	3	11	24	42	64	91	122
		Static Pressure, Pa	2	7	14	24	37	52	70
		NC (Noise Criteria)	<10	<10	<10	16	24	31	37
		Throw, m	0.3 - 1 - 1.5	1 - 1.5 - 2.8	1.5 - 2.3 - 4.3	1.8 - 2.8 - 5.3	2.3 - 3.3 - 5.8	2.8 - 4 - 6.5	3 - 4.5 - 7
	Length 1200mm	Air Flow, l/s	57	85	113	142	170	198	227
		Total Pressure, Pa	8	17	31	48	70	95	124
		Static Pressure, Pa	2	4	8	12	18	24	31
		NC (Noise Criteria)	<10	<10	<10	<10	16	22	27
		Throw, m	0.5 - 1.3 - 2.3	1.3 - 1.5 - 3.3	1.5 - 2.3 - 4.5	1.8 - 2.8 - 5.5	2.3 - 3.3 - 6.8	2.5 - 4 - 7.5	3 - 4.5 - 8
	Length 1500mm	Air Flow, l/s	66	94	123	151	179	208	236
		Total Pressure, Pa	10	20	33	50	71	95	122
		Static Pressure, Pa	2	3	6	9	13	17	22
		NC (Noise Criteria)	<10	<10	<10	<10	12	17	22
		Throw, m	0.5 - 1.3 - 2.5	1.3 - 1.5 - 3.3	1.5 - 2.3 - 4.3	1.8 - 2.8 - 5.3	2.3 - 3 - 6.5	2.5 - 3.8 - 7.3	2.8 - 4.3 - 8.3

TFB - 20 - JT with 200mm inlet

51mm Slot Width	Length 600mm	Air Flow, l/s	33	66	99	132	165	198	231
		Total Pressure, Pa	2	8	18	33	51	74	100
		Static Pressure, Pa	1	6	13	23	36	51	70
		NC (Noise Criteria)	<10	<10	14	21	27	33	38
		Throw, m	0.3 - 0.5 - 1.5	1 - 1.5 - 3	1.5 - 2.3 - 4.5	2.3 - 3 - 6	2.5 - 3.8 - 7	3 - 4.5 - 7.5	3.8 - 5.3 - 8.3
	Length 1200mm	Air Flow, l/s	66	113	160	208	255	302	349
		Total Pressure, Pa	4	12	23	39	58	82	110
		Static Pressure, Pa	1	4	8	14	21	30	40
		NC (Noise Criteria)	<10	12	21	27	32	36	40
		Throw, m	0.3 - 1 - 2.3	1.3 - 1.8 - 3.8	1.8 - 2.8 - 5.3	2.3 - 3.3 - 6.8	2.8 - 4.3 - 8.3	3.3 - 5 - 9.3	3.8 - 5.8 - 10
	Length 1500mm	Air Flow, l/s	71	123	175	227	278	330	382
		Total Pressure, Pa	4	12	24	40	61	85	114
		Static Pressure, Pa	1	3	6	11	16	23	30
		NC (Noise Criteria)	<10	13	21	27	32	36	40
		Throw, m	0.3 - 1 - 2.3	1 - 1.8 - 3.8	1.8 - 2.5 - 5.3	2.3 - 3.3 - 6.8	2.8 - 4 - 8.3	3 - 5 - 9.5	3.8 - 5.5 - 10.3

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - JET THROW (JT)

TFB -10 - JT with 250mm inlet

25mm Slot Width	Length 600mm	Air Flow, l/s	24	45	66	87	109	130	151
		Total Pressure, Pa	3	10	22	38	59	84	114
		Static Pressure, Pa	3	10	21	36	56	80	108
		NC (Noise Criteria)	<10	<10	16	22	28	33	38
		Throw, m	0.5 - 1 - 1.8	1.3 - 1.8 - 3.3	1.5 - 2.5 - 4.3	2.3 - 3.3 - 5	2.8 - 4 - 5.5	3.3 - 4.3 - 6	3.8 - 4.5 - 6.8
	Length 1200mm	Air Flow, l/s	47	85	123	160	198	236	274
		Total Pressure, Pa	3	10	21	37	56	79	107
		Static Pressure, Pa	3	9	18	31	47	66	89
		NC (Noise Criteria)	<10	<10	18	25	30	35	39
		Throw, m	1 - 1.3 - 2.5	1.5 - 2.3 - 4.5	2.3 - 3.3 - 5.8	2.8 - 4.3 - 6.8	3.8 - 5.3 - 7.5	4.3 - 5.8 - 8.3	5 - 6.5 - 8.8
	Length 1500mm	Air Flow, l/s	52	99	146	193	241	288	335
		Total Pressure, Pa	3	10	21	37	58	82	112
		Static Pressure, Pa	2	7	16	28	44	63	85
		NC (Noise Criteria)	<10	<10	19	26	31	35	40
		Throw, m	1 - 1.3 - 2.5	1.5 - 2.5 - 5	2.5 - 3.3 - 6.5	3 - 4.5 - 7.3	4 - 5.8 - 8.3	4.5 - 6.5 - 9.3	5.5 - 7 - 9.8

TFB -15 - JT with 300mm inlet

38mm Slot Width	Length 600mm	Air Flow, l/s	28	59	90	120	151	182	212
		Total Pressure, Pa	2	9	20	37	58	84	115
		Static Pressure, Pa	2	8	20	35	55	80	110
		NC (Noise Criteria)	<10	<10	<10	18	27	35	43
		Throw, m	0.3 - 1 - 1.5	1.3 - 1.5 - 3.3	1.5 - 2.5 - 5	2.3 - 3.3 - 5.8	2.8 - 4.3 - 6.8	3.3 - 5.3 - 7.3	4 - 5.5 - 8
	Length 1200mm	Air Flow, l/s	57	113	170	227	283	340	396
		Total Pressure, Pa	2	9	21	37	58	83	113
		Static Pressure, Pa	2	8	18	31	49	70	95
		NC (Noise Criteria)	<10	<10	10	21	30	37	45
		Throw, m	0.5 - 1.3 - 2.3	1.5 - 2.3 - 4.5	2.3 - 3.3 - 6.8	3 - 4.5 - 8	3.8 - 5.5 - 9.3	4.8 - 6.8 - 9.8	5.3 - 7.5 - 10.8
	Length 1500mm	Air Flow, l/s	66	132	198	264	330	396	463
		Total Pressure, Pa	2	9	20	35	55	79	107
		Static Pressure, Pa	2	7	15	27	42	61	83
		NC (Noise Criteria)	<10	<10	10	21	29	36	43
		Throw, m	0.5 - 1.3 - 2.5	1.5 - 2.5 - 4.5	2.5 - 3.3 - 7	3 - 4.5 - 8.8	4 - 5.8 - 9.8	4.5 - 7 - 10.8	5.5 - 8.3 - 11.5

TFB - 20 - JT with 300mm inlet

51mm Slot Width	Length 600mm	Air Flow, l/s	33	76	118	160	203	245	288
		Total Pressure, Pa	2	8	20	36	58	85	117
		Static Pressure, Pa	1	7	8	34	54	79	108
		NC (Noise Criteria)	<10	<10	<10	17	25	31	36
		Throw, m	0.3 - 0.5 - 1.5	1.3 - 1.8 - 3.3	1.8 - 2.8 - 5.5	2.5 - 3.8 - 6.8	3 - 4.5 - 7.5	3.8 - 5.5 - 8.3	4.3 - 6.5 - 9.3
	Length 1200mm	Air Flow, l/s	66	137	208	278	349	420	491
		Total Pressure, Pa	2	8	19	34	54	77	106
		Static Pressure, Pa	1	6	14	25	40	58	79
		NC (Noise Criteria)	<10	<10	17	24	31	37	41
		Throw, m	0.3 - 1 - 2.3	1.5 - 2.3 - 4.5	2.3 - 3.3 - 6.8	3 - 4.5 - 8.8	3.8 - 5.8 - 10	4.5 - 6.8 - 11	5.3 - 8 - 12
	Length 1500mm	Air Flow, l/s	71	156	241	326	411	496	580
		Total Pressure, Pa	2	8	19	34	54	79	108
		Static Pressure, Pa	1	5	12	22	35	51	70
		NC (Noise Criteria)	<10	<10	19	26	32	38	43
		Throw, m	0.3 - 1 - 2.3	1.5 - 2.3 - 4.5	2.5 - 3.3 - 7	3 - 5 - 9.5	4 - 6 - 11	5 - 7.3 - 12	5.5 - 8.5 - 12.8

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - JET THROW (JT)

TFB - 25 - JT with 250mm inlet

63mm Slot Width	Length 600mm	Air Flow, l/s	38	85	132	179	227	274	321
		Total Pressure, Pa	2	8	19	35	55	81	111
		Static Pressure, Pa	1	6	15	27	43	63	87
		NC (Noise Criteria)	<10	<10	<10	13	21	28	34
		Throw, m	0.3 - 0.5 - 1.5	1.3 - 1.8 - 3.3	1.8 - 2.8 - 5.3	2.5 - 3.8 - 7	3 - 4.5 - 8	3.8 - 5.5 - 8.8	4.3 - 6.5 - 9.5
	Length 1200mm	Air Flow, l/s	71	142	212	283	354	425	496
		Total Pressure, Pa	2	9	20	36	56	80	109
		Static Pressure, Pa	1	4	9	17	26	38	52
		NC (Noise Criteria)	<10	<10	<10	17	24	30	36
		Throw, m	0.3 - 0.5 - 2.3	1.3 - 2.3 - 4	2.3 - 3 - 6	2.8 - 4 - 8	3.3 - 5 - 10	4 - 6 - 11	4.5 - 7 - 12
	Length 1500mm	Air Flow, l/s	76	156	236	316	396	477	557
		Total Pressure, Pa	2	9	21	37	58	84	114
		Static Pressure, Pa	1	3	7	13	21	31	42
		NC (Noise Criteria)	<10	<10	<10	16	24	30	36
		Throw, m	0.3 - 0.5 - 1.8	1.3 - 1.8 - 4	2.3 - 3 - 6	2.8 - 4 - 8	3.3 - 5.3 - 10	4 - 6 - 11.5	4.5 - 7 - 12.5

TFB - 30 - JT with 250mm inlet

76mm Slot Width	Length 600mm	Air Flow, l/s	47	101	156	210	264	319	373
		Total Pressure, Pa	2	8	20	36	57	83	113
		Static Pressure, Pa	1	6	14	26	41	59	81
		NC (Noise Criteria)	<10	<10	<10	<10	15	24	31
		Throw, m	0.3 - 0.5 - 1.8	1.3 - 1.8 - 3.8	1.8 - 2.8 - 5.5	2.5 - 3.8 - 7.5	3 - 5 - 8.8	3.8 - 5.8 - 9.5	4.5 - 6.8 - 10.3
	Length 1200mm	Air Flow, l/s	94	170	245	321	396	472	547
		Total Pressure, Pa	3	11	23	39	60	85	114
		Static Pressure, Pa	1	4	9	15	23	32	44
		NC (Noise Criteria)	<10	<10	<10	<10	13	21	27
		Throw, m	0.3 - 1 - 2.5	1.3 - 2.3 - 4.3	2.3 - 3 - 6	2.8 - 4 - 8.3	3.3 - 5 - 10	4 - 6 - 11.5	4.5 - 7 - 12.5
	Length 1500mm	Air Flow, l/s	113	193	274	354	434	514	595
		Total Pressure, Pa	4	12	25	41	62	87	116
		Static Pressure, Pa	1	3	7	12	18	25	33
		NC (Noise Criteria)	<10	<10	<10	<10	10	18	24
		Throw, m	0.3 - 1 - 2.5	1.3 - 2.3 - 4.3	2.3 - 3 - 6	2.8 - 4 - 8	3.3 - 5 - 9.8	4 - 5.8 - 11.5	4.5 - 6.8 - 13

- Pressures are given in Pascal (Pa)
 - Isothermal throw values are given for terminal velocities of 0.8, 0.5 and 0.3m/sec respectively.
 - Each NC value represents the noise criteria curve which will not be exceeded by the sound pressure in any of the octave bands, 2nd through 7th, with a room absorption of 10dB, re 10⁻¹² watts.
- The tests were conducted with the FlowBar and plenums as a composite assembly.
 - Throws listed are for the 1-way air pattern. For divided air flow, select the airflow in each direction according to the number of slots aimed in that direction, with the total airflow apportioned between slots.
- Plenums not provided by Air Diffusion may demonstrate performance variations from the published data and therefore Air Diffusion would not be able to subsequently guarantee that performance matches our data.

FLOWBAR WITH AIR DIFFUSION PLENUM BOX - JET THROW (JT)

TFB - 25 - JT with 300mm inlet

63mm Slot Width	Length 600mm	Air Flow, l/s	38	90	142	193	245	297	349
		Total Pressure, Pa	1	8	19	36	57	84	116
		Static Pressure, Pa	1	7	17	31	51	74	102
		NC (Noise Criteria)	<10	<10	<10	12	20	26	33
		Throw, m	0.3 - 0.5 - 1.5	1.3 - 1.8 - 3.8	1.8 - 2.8 - 5.8	2.8 - 4 - 7.3	3.3 - 5 - 8.3	4 - 6 - 9.3	4.5 - 7 - 10
	Length 1200mm	Air Flow, l/s	71	158	245	333	420	507	595
		Total Pressure, Pa	2	8	19	36	57	83	114
		Static Pressure, Pa	1	5	13	23	37	54	74
		NC (Noise Criteria)	<10	<10	<10	18	26	32	38
		Throw, m	0.3 - 0.5 - 2.3	1.5 - 2.3 - 4.5	2.5 - 3.3 - 7	3 - 5 - 9.5	4 - 6 - 11	5 - 7.3 - 12.3	5.5 - 8.5 - 13
	Length 1500mm	Air Flow, l/s	76	175	274	373	472	571	670
		Total Pressure, Pa	1	8	19	34	55	81	111
		Static Pressure, Pa	1	4	10	19	30	44	60
		NC (Noise Criteria)	<10	<10	<10	18	26	32	38
		Throw, m	0.3 - 0.5 - 1.8	1.5 - 2.3 - 4.5	2.5 - 3.3 - 7	3 - 5 - 9.5	4 - 6 - 11.5	5 - 7.3 - 12.8	5.8 - 8.5 - 13.8


TFB - 30 - JT with 300mm inlet

76mm Slot Width	Length 600mm	Air Flow, l/s	47	106	165	224	283	342	401
		Total Pressure, Pa	2	8	19	35	56	81	112
		Static Pressure, Pa	1	7	16	29	47	68	94
		NC (Noise Criteria)	<10	<10	<10	<10	15	24	31
		Throw, m	0.3 - 0.5 - 1.8	1.3 - 1.8 - 3.8	1.8 - 3 - 5.8	2.8 - 4 - 8	3.3 - 5.3 - 9.3	4 - 6 - 9.8	5 - 7.3 - 10.8
	Length 1200mm	Air Flow, l/s	94	189	283	378	472	566	661
		Total Pressure, Pa	2	9	21	37	58	83	113
		Static Pressure, Pa	1	5	12	21	32	47	63
		NC (Noise Criteria)	<10	<10	<10	<10	17	25	32
		Throw, m	0.3 - 1 - 2.5	1.5 - 2.5 - 5	2.5 - 3.8 - 7.3	3 - 5 - 9.5	4 - 6 - 11.5	5 - 7.3 - 12.8	5.5 - 8.3 - 13.8
	Length 1500mm	Air Flow, l/s	113	217	321	425	529	632	736
		Total Pressure, Pa	3	10	21	37	58	82	112
		Static Pressure, Pa	1	4	10	17	26	37	50
		NC (Noise Criteria)	<10	<10	<10	<10	15	24	30
		Throw, m	0.3 - 1 - 2.5	1.5 - 2.5 - 5	2.5 - 3.8 - 7.3	3.3 - 5 - 9.8	4 - 6 - 12	5 - 7 - 13.5	5.5 - 8.3 - 14.8

- Pressures are given in Pascal (Pa)
 - Isothermal throw values are given for terminal velocities of 0.8, 0.5 and 0.3m/sec respectively.
 - Each NC value represents the noise criteria curve which will not be exceeded by the sound pressure in any of the octave bands, 2nd through 7th, with a room absorption of 10dB, re 10⁻¹² watts.
- The tests were conducted with the FlowBar and plenums as a composite assembly.
 - Throws listed are for the 1-way air pattern. For divided air flow, select the airflow in each direction according to the number of slots aimed in that direction, with the total airflow apportioned between slots.
- Plenums not provided by Air Diffusion may demonstrate performance variations from the published data and therefore Air Diffusion would not be able to subsequently guarantee that performance matches our data.

DIMENSIONS & DETAILS - HIGH THROW (HT)


Model TFB - 10/15/20/25/30

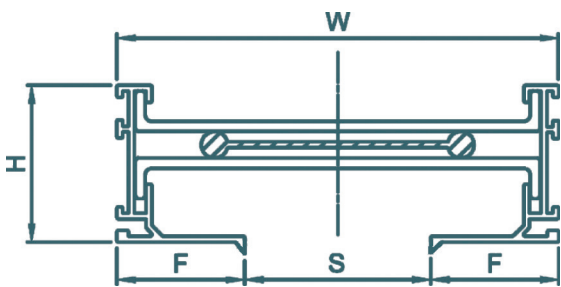

TFB-10/15/20/25/30 - HT				
	F	S	W	H
1 Slot (25mm)	40	25	70	43
1 Slot (38mm)	45	38	95	43
1 Slot (51mm)	55	51	121	43
1 Slot (63mm)	55	63	146	59
1 Slot (76mm)	60	76	171	59

DIMENSIONS & DETAILS - JET THROW (JT)

Model TFB - 10/15/20/25/30

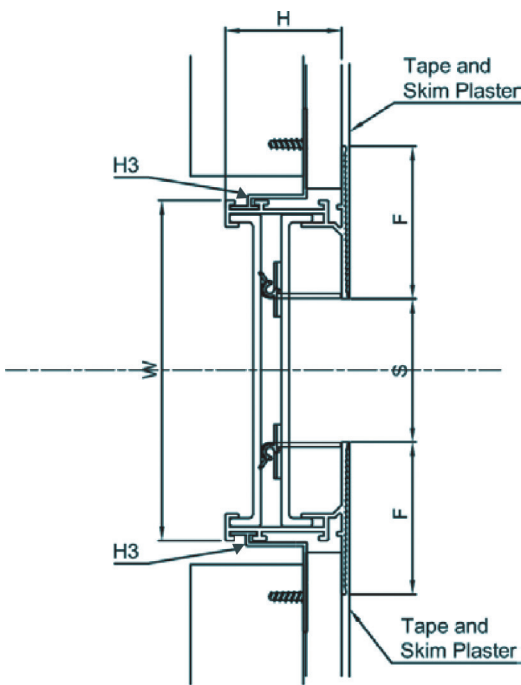


TFB-10/15/20/25/30 - JT				
	F	S	W	H
1 Slot (25mm)	40	25	70	43
1 Slot (38mm)	45	38	95	43
1 Slot (51mm)	55	51	121	43
1 Slot (63mm)	55	63	146	61
1 Slot (76mm)	60	76	171	61

STANDARD INSTALLATION DETAILS

- HIGH THROW (HT) & JET THROW (JT)


UHC Upper Hanger Clip

The upper hanger clip is used to suspend the FlowBar assembly from the structure. The clip is designed to utilize standard ceiling hanger wire. UHC is for 1 slot only and TFB-10, 15, 20, 25 and 30.

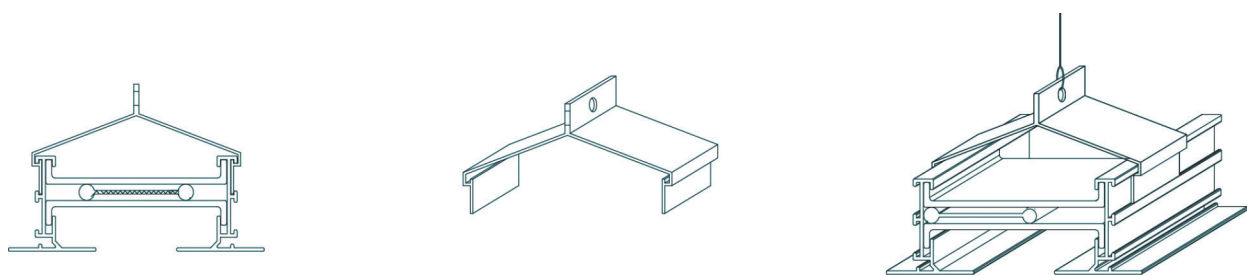


H3 Hard Ceiling Clip

The H3 hard ceiling clip can be used to mount the FlowBar assembly when a standard plasterboard ceiling is required.

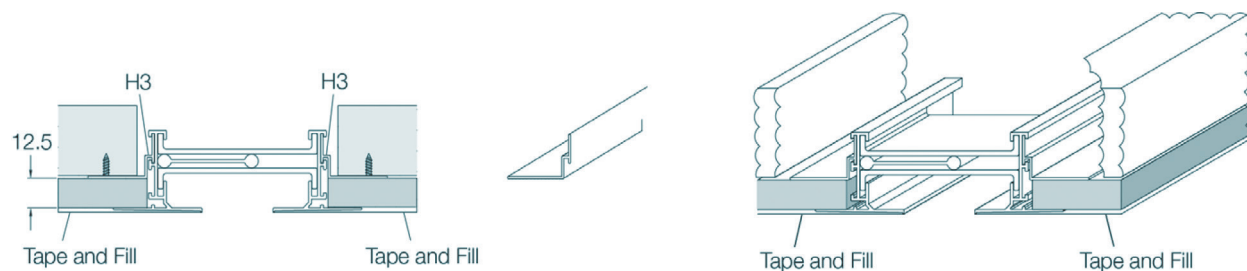


Spline Support Clip


The SS1 spline clip is also used to adjoin multiple sections of FlowBar when continuous lengths are desired.

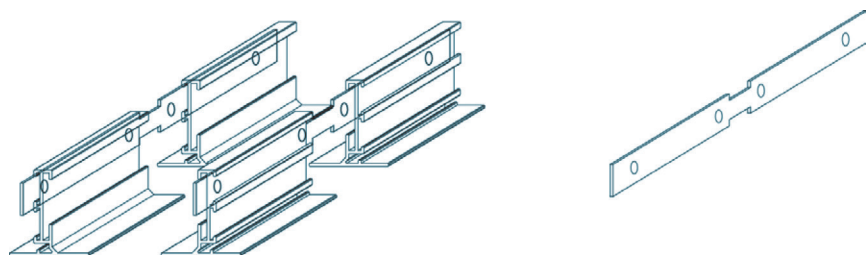

Standard Frame
Plaster Frame Installation

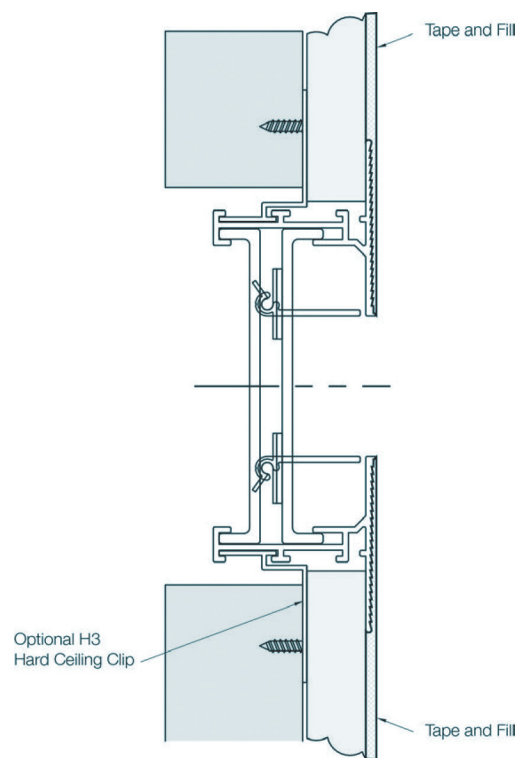


Standard Installation for
Suspended Ceiling Systems

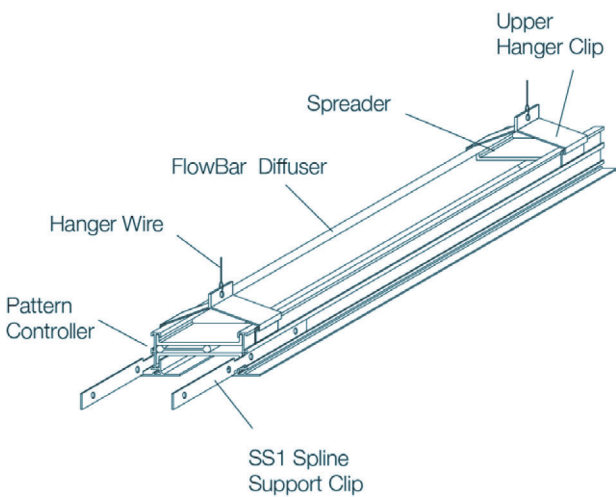

STANDARD INSTALLATION DETAILS - JET THROW (JT) ONLY

Bracket Diffuser Assembly

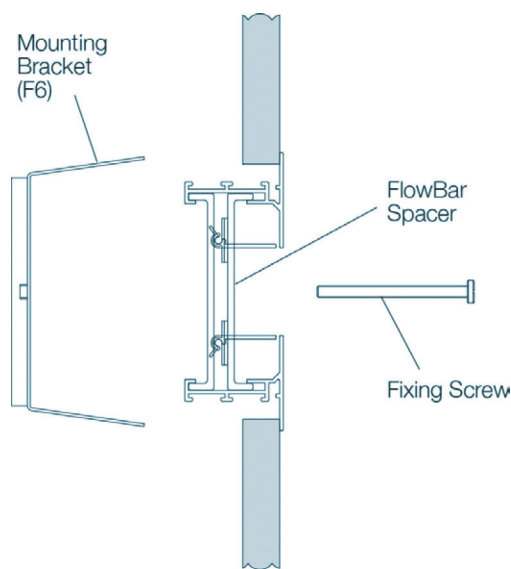

Diffuser Installation without plenum

